## 单色双面印刷 /80G书纸 210x285MM



下午5:00	******	
http://itotolink.net C	₩ WAN Se	tting
1	PPPoE	Dynamic IP Static IP
TOLINK Router Setting	Please enter L	Jser Name and Password provided
	by your ISP	
Model NO.: A830R F/W Version: V5.9c.680	User Name	
	Password	
		۲
Setup Advanced Setup	Back	Next
1		
	WAN Connection Type	Description
	Static IP	Input the IP address, Subnet Mask,
	DHCP	No information required. Please confirm
	PPPoF	Input User Name and Password from
		your ISP.
3 5400		
J FAQS -		
1. Unable to log in the rout Please check if your Phone ha	er's web page on Phon as connected to the Wi-Fi of	<b>e?</b> f the router and make sure you have
entered the correct default gat 2. How to reset the router	eway http://itotolink.net to factory default setti	ngs?
Keep the router powered on, t System indicator becomes blir	hen press and hold the RST hking light guickly.	button (for about 5-8 seconds) until
3. How to do if forgetting the Reset the router to its factory	he router's Login Users	Name and Password?
admin.	settings. The Oser Name a	
4. How to do if forgetting the Log in the router and go to 50	he password of the Wi- G Wireless—Basic Settings	Fi? or 2.4G Wireless—Basic Settings to
check or revise the password.		
FCC warning:		
This equipment has been tested and Part 15 of the FCC Rules. These limit	I found to comply with the limit ts are designed to provide reas	s for a Class B digital device, pursuant t conable protection against harmful interfe
rence in a residential installation. If	The second secon	THE TRANSPORT OF THE TRANSPORT OF THE TRANSPORT

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference

- (2) This device must accept any interference received, including interference! that may cause undesired operation.

RF Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment . This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

## Manufacturer: ZIONCOM ELECTRONICS (SHENZHEN) LTD.

Address: Room 702, Unit D, 4 Building Shenzhen Software Industry Base, Xuefu Road, Nanshan District, Shenzhen, Guangdong, China