

Interceptor DS4200 GAMING Keyboard



English 1

System Requirements

- PC with USB port
- Supported operating systems include: Win7, Win8, Win10 (32/64 bits), Linux
- Drivers and software are not required

Anti-Ghosting

- Tab+Caps+Shift+Ctrl+Q+W+E+R+T+A+S+D+F+G+Z+X+C+V+B+Space (20 Key)
- TAB+CAPS+Shift+Ctrl+Space+Q+W+E+A+S+D+F+G+Z+X+C+↑+ ←+ ↓+→ (20 Key)

Keyboard (Fn) Combo keys

- Activate the default Media Player
- Lower the speaker's volume
- Raise the speaker's volume
- Mute the speaker's volume

English 2

- Go to the previous track
- Go to the next track
- Play/Pause the playback
- Stop the playback
- Activate the default mail application
- Activate the default web browser
- Enable or disable the Gaming Mode. The G LED, located on the upper right corner of the keyboard, illuminates when the Gaming Mode is enabled. Note that the function of Windows Key will be disabled while the Gaming Mode is enable
- Open the calculator

msi
Micro-Star INT'L CO., LTD.
No.69, Lide St., Zhonghe Dist.,
New Taipei City 235, Taiwan(R.O.C.)
Tel:886-2-3234-5599
Fax:886-2-3234-5488
www.msi.com

English 3

- The typewriter keys [W], [A], [S], [D] may correspond with the direction keys [↑][↓][←][→]. Using the Fn and W combo keys to exchange the functions of typewriter keys [W], [A], [S], [D] for the direction keys [↑][↓][←][→].
 - Use this key to select the backlight mode among Light Up Always, Breathing, and Off on recurring.
 - **Backlight Brightness Level Selections**
Use the Fn combo keys to increase or decrease the brightness level of the keyboard backlight LEDs. The selections of Backlight Brightness level include: High, Medium, Low, Off, and the default setting is High.
 - **Backlight Flashing Frequency Selections**
Use the Fn combo keys to increase or decrease the flashing frequency of the keyboard backlight LEDs. Total 10 frequencies are available for selecting; include the default selection of no flashing.
* For French and Norwegian users, please use the Fn combo keys as illustrated to make the Backlight Flashing Frequency Selections uency Selections
- French**
- Norwegian**

繁體中文 1

系統需求

- 搭載 USB 連接埠的個人電腦
- 作業系統支援 Win7, Win8, Win10 (32/64 bits), Linux
- 無需安裝驅動程式與應用程式

多鍵防衝突組合模式

- Tab+Caps+Shift+Ctrl+Q+W+E+R+T+A+S+D+F+G+Z+X+C+V+B+Space (20 鍵)
- TAB+CAPS+Shift+Ctrl+Space+Q+W+E+A+S+D+F+G+Z+X+C+↑+ ←+ ↓+→ (20 鍵)

鍵盤 (Fn) 組合鍵

- 啟動預設媒體播放器
- 降低喇叭音量
- 提高喇叭音量
- 靜音

繁體中文 2

- 上一首
- 下一首
- 播放/暫停
- 停止撥放
- 啟動預設郵件軟體
- 啟動預設瀏覽器
- 啟動或關閉 Gaming 模式。位於鍵盤右上角的 G LED 燈號，於 Gaming 模式啟動時點亮。當 Gaming 模式啟動時，Windows 鍵的功能將會關閉。
- 開啟計算機

繁體中文 3

- 打字鍵 [W], [A], [S], [D]和方向鍵 [↑][↓][←][→] 為可互相對應之功能鍵。將打字鍵[W], [A], [S], [D] 切換為方向鍵功能時，請按 Fn + W 按鍵。
 - 利用此鍵可循環選擇所需的背光模式，恆亮、呼吸、及關閉。
 - **背光亮度設定**
利用 Fn 組合鍵可提提高或降低鍵盤 LED 燈的背光亮度，選項為高、中、低、及關閉。預設亮度為高。
 - **背光閃爍頻率設定**
利用 Fn 組合鍵可提提高或降低鍵盤 LED 燈的背光閃爍頻率。總共10種頻率可供選擇，包含預設閃爍頻率為不閃爍。
*法國及挪威使用者請使用圖示 Fn 組合鍵來設定背光閃爍頻率。
- French**
- Norwegian**